

INSTRUCTIONS - PLEASE READ

- Please insert the batteries by pressing the Orange button and pulling the compartment out. Use only Duracell Batteries (Other Brand batteries will not work)
- **Frequency- How frequently you want the Timer to turn ON**
- **Runtime- How long do you want the Timer to stay ON**
- Based on the above information, you can now program the timer accordingly.
Ex. You want the timer to turn on everyday for 10 minutes. You set the Frequency to 24hours and the Runtime to 10 minutes.
- Please note the **Start time depends on the current time** (Whenever you turn the knobs and set the frequency), i.e., If the present time is 7.00am, you set the frequency knob to 24, and runtime knob to 10 minutes, the timer will turn on the **next day** at 7.00am. It will not work immediately.
- Once you turn the knobs, the led will make a quick flash, which indicates that the program is set. Happy gardening!

Note: Please clean the mesh filter to avoid blockage which may result in low/zero water flow

If you still have any further questions, please feel free to contact us on:

WhatsApp: +91 9945313756 or Email: techagromotive@gmail.com



Please check Battery Indicator

LOW Battery- LED will blink every 1 second

Good Battery- LED will blink every 5 seconds

Scan for Video Guide

